
KK-C38 Operating Instructions

Illustration:

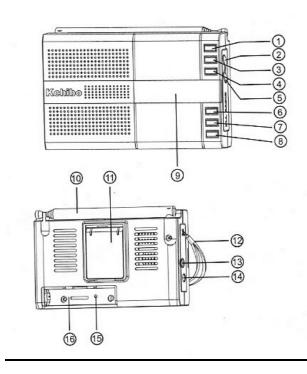

1. Power ON/OFF / SLEEP	8. BAND / TIME SET
2. UP Frequency Serach	9. LCD screen
3. MEMORY	10. Antenna
4. NEXT/ AL ON	11. Supporting rack
5. DOWN Frequency Search	12. Hand strap
6. + Volume	13. Earphone jack
7 Volume	14. 3V D.C. jack
	15. Reset
	16. Battery Compartment

Battery Installation:

- 1. Please install 2AAA batteries.
- 2. Please replace batteries when you see the low battery indicator.
- 3. Please replace your batteries within 30 seconds, otherwise all memory will be lost.

Operations:

Power:

Press the Power ON/OFF button (1) to switch on or off the radio.

Volume Control:

- 1. Electronic volume control is used.
- 2. Press + (6) to increase or (7) to reduce the volume.

Band Select

Press BAND/TIME SET button (8) to switch between FM, FM 1 and AM.

Manual Search:

Press UP (2) or DOWN (5) until you locate the station.

Auto Search:

Long press UP(2) or DOWN(5) until it stops at the next station. You may stop the searching process anytime by pressing the (2) or (5)

Earphone/ Speaker change over:

Change over earphone or speaker by switch (16).

Tuning step:

FM: 0.1MHz each time you press the UP or DOWN button.

AM: 9KHz each time you press the UP or DOWN button.

Memory Preset:

- 1. Use auto or manual search to locate the station.
- 2. Press the MEMORY button (3), the LCD indicator "MEM" will blink.
- 3. Within 5 seconds, press NEXT (4) to search any free channel. Press MEMORY button again to store the station.

Memory Recall:

- 1. Select the band by BAND button (8)
- **2.** Press NEXT button (4) to select the right stations.

Earphones:

Plug into earphones to listen to the radio. The signal to speaker will cut off.

Night light:

The night light will turn on for few seconds whenever any button is pressed.

Reset:

Press the reset key (15) if the radio does not operate properly.

Use of Antenna:

- MW: The built-in magnetic antenna inside the radio is used. Rotate body to get best reception.
 (Picture 1 on p.13)
- 2. FM: Extend the antenna. Try different position to get the best reception (Picture 2)

Time setting

Clock:

- 1. Press the BAND/TIME SET button (8) once , the hour will blink. Press the UP (2) or DOWN (5) to set the hour.
- 2. Press the BAND/TIME SET button (8) twice, the miin will blink. Press the UP (2) or DOWN (5) to set the minute.

Alarm Time:

- 1. Press the BAND/TIME SET button (8) three times , and alarm icon appears and the hour will blink. Press the UP (2) or DOWN (5) to set the hour.
- Press the BAND/TIME SET button (8) four times, the min will blink. Press the UP (2) or DOWN
 to set the minute.

Alarm:

- 1. Press the NEXT/AL ON (4) to turn on the alarm function.
- 2. The radio will turn on at the preset time. The radio will turn off after 2 hours operation.

Sleep Auto-Shut off:

- Under the clock mode, long press POWER/SLEEP button (1) until the "SLEEP" and "90" appear.
 The radio turns to sleep mode and will shut off in 90 minutes.
- 2. When the sleep time is being displayed, press POWER/SLEEP (1) can set the shut-off time in the order 90-80-70-60-50-40-30-20-10- turn off sleep function..
- 3. After 4 seconds, the screen will display the frequency. The radio will turn off at the preset time.

4. You may still turn off the radio earlier by press the POWER/SLEEP button (1)

Specifications:

- 1. Frequency Range
 - o FM 87.5-108 MHz
 - o FM 1 76-98 MHz
 - o AM 520 1620 KHz
- 2. Memory preset (30)
 - o FM- 10, FM1- 10, AM- 10
- 3. Noise Limit Sensitivity
 - FM <= 20uV
 - \circ AM < = 5mV/m
- 4. Single Signal Selectivity >=10dB
- 5. Power: 2 x AAA batteries or 3V D.C.
- 6. Maximum power consumption: 150mA
- 7. Speaker: 45mm/60hm/0.5W
- 8. Earphone jack: 3.5mm 32ohm
- 9. Measurement : 100 x 62 x 20 mm
- 10. Weight: 110g (excluding batteries)