


RS-9710 Operating Instructions

Radio design :

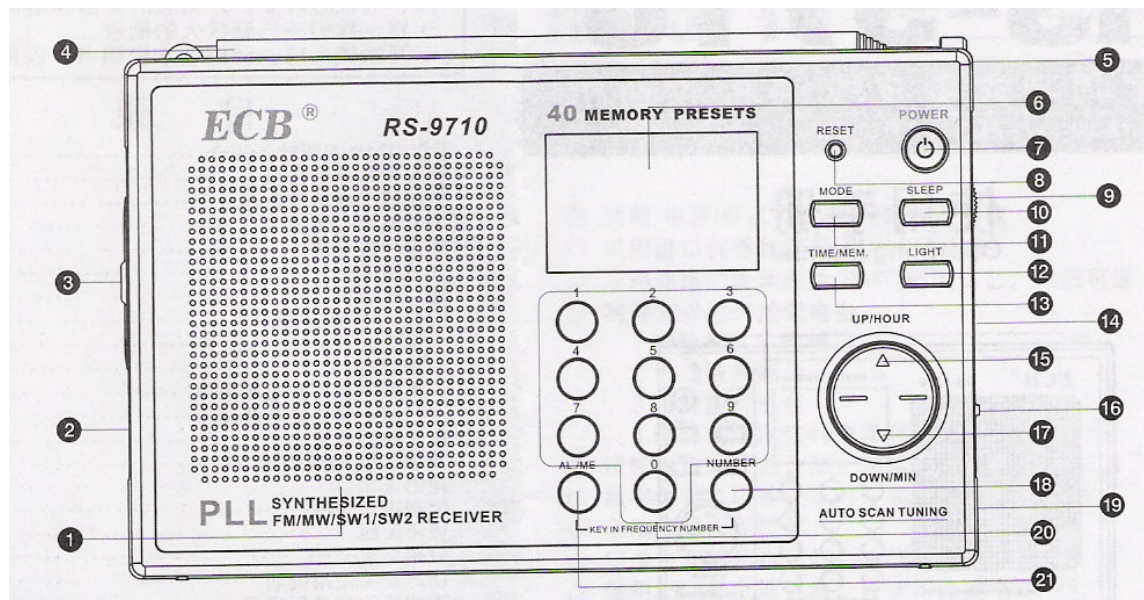

1. Speaker	12. Night Light
2. D.C. Jack	13. Memory/Time Set
3. Band Switch	14. Earphone Jack
4. Antenna	15. Hour/Up Search
5. Hand Strap	16. Key Lock
6. LCD Display	17. Min/Down Search
7. Power	18. Frequency Input
8. Reset	19. Battery Compartment
9. Volume Control	20. 0-9 numeric pad
10. Sleep/Timer On	21. AL. Set/Meter Band Switch
11. Mode	

Battery Installation :

1. Please install 3AA batteries.
2. Please replace batteries when you see the low battery indicator.

Band switch :

Press the Band Switch button (3) to select different band in the following order : FM – MW – SW1 – SW2 .

Search Stations

Manual Search :

1. Turn on the radio
2. Select the band
3. Press Up Search(15) or Down Search (17) until you locate the station.

Auto Search :

1. Turn on the radio
2. Select the band
3. Long press Up Search (15) or Down Search (17) until it stops at the next station
4. Press (15) / (17) if you would like to stop the searching process

Direct frequency input :

Under the listening mode, press the FREQ INPUT (18) button once. Press numbers pad to enter the desired frequency. The LCD will display your selection. Press FREQ INPUT (18) again to confirm.

Examples :

1. FM 99.3 MHz : Select FM, then FREQ INPUT. Press 9-9-3 and then FREQ INPUT again.
2. MW 999 KHz :Press 9-9-9.....
3. SW1 6.84MHz :Press 6-8-4.....
4. SW2 15.195MHz :Press 1-5-1-9-5.....

Memory Presets :

1. Use auto, manual or direct frequency input to locate the station.
2. Press the MEM (13) button , the LCD indicator will blink.
3. Press 0-9 within 5 seconds. The station will be stored in CH0-CH9
4. When new frequency is selected , the old memory will be erased.

Time setting :

1. Under the “off” mode, press the Memo/Time Set (13) button , the number on LCD will blink.
2. Press the HOUR (15) button to set the hour and MIN (17) button to set the minute.

Meter Band Switch/ Alarm Set

1. Under the radio mode, you can press the Meter Band Switch (21) to select SW1 or SW2.
2. Under the off mode, you can press the AL. Set button (21) to turn on the alarm function. Press the Hour (15) or Min(17) to set the alarm time.
3. Press the AL. Set button (21) again if you would like to turn the function off.

Timer On

1. Under the off mode, you can press the Timer On button (10) to turn on the timer on function .
Press the Hour (15) or Min(17) to set the time you want the radio to be turned on.
2. Press Timer On button (10) again if you would like to turn off the function.

Sleep Mode Shut Off :

1. Under the radio mode , press SLEEP(10) button once. The sleep icon and “90” min will appear.
2. Press the SLEEP (10) button again to select the desired shut off time (from 90 to 10 minutes) .
3. The radio will shut off in the preset time.

Use of Antenna :

1. MW : The built-in magnetic antenna inside the radio is used. Rotate body to get best reception.
2. FM : Extend the antenna. Try different angles to get the best reception
3. SW : Extend the antenna. Make the antenna vertical.

Specifications :

1. Frequency Range
 - FM 87.0-108 MHz
 - AM 522 - 1620 KHz (9K step)
 - SW1 2.30 – 7.80 MHz
 - SW2 9.10 – 26.10 MHz
2. Memory preset (40)
 - FM , AM, SW1 and SW2 (4 x 10)

3. Noise Limit Sensitivity
 - FM $\leq 10\mu\text{V}$
 - AM $\leq 1\text{mV/m}$
 - SW $\leq 30\mu\text{V}$
4. Single Signal Selectivity $\geq 16\text{dB}$
5. Power : DC 4.5V or 3 x AA batteries (not included)
6. Speaker : 57mm/16ohm/0.5W
7. Earphone jack : 3.5mm
8. Measurement : 128 x 78 x 28 mm
9. Weight : 200g (excluding batteries)